

Includes:

- 1 - LockVise™ Locking Phone Holder with Key Lock (SM090)
- 1 - Clamp Mount with 25mm Ball (CPM01B)
- 1 - Robust™ Series 3.75 inch Shaft Arm (SP-RM250)
- 1 - Metal 4-Hole AMPS to 25mm Ball Adapter (APMAMPS25MM)

IMPORTANT:

To ensure a secure and stable installation, clean the mounting surface area thoroughly by removing all grease, dirt, and debris.


Compatibility: This holder is designed to work with a variety of phones, accommodating the most popular models with widths ranging from 4.88" to 7.18" when mounted horizontally.

Please note that the SM090 hardware specifications.

- 1 - Allen key
- 2 - Locking keys
- 2 - Foam pads
- 4 - Screws


1 Assemble the AMPS mount to the phone holder

Locate the AMPS mount with 25mm ball, the locking phone holder, and provided installation screws. Hand tighten the screws to the back of the holder.

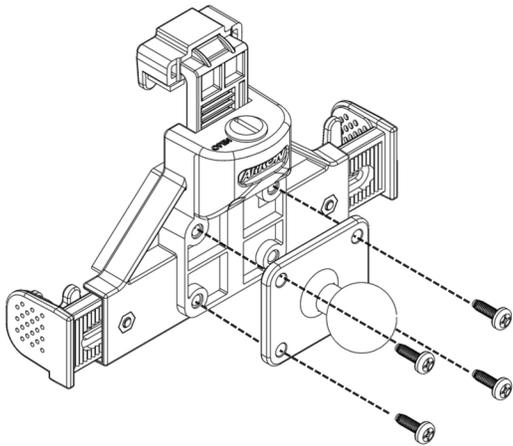


3 Adjust the clamp and secure to the yoke

Loosely place the system onto the yoke shaft into the desired position. Turn the clamp adjustment knob over the yoke shaft.

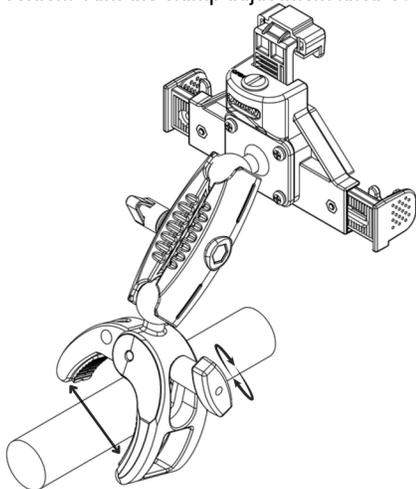


2 Assemble the components

Locate the 3.75" shaft and turn to the adjustment knob counterclockwise to expand. Insert the 25mm ball ends into the shaft. Turn clockwise to tighten.

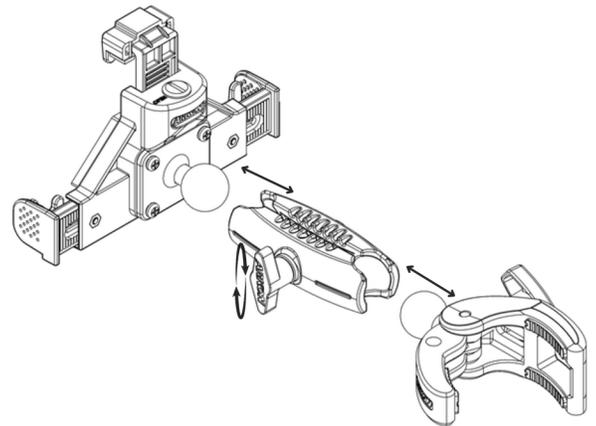

4 Tighten the 3.75" shaft to secure your desired position

Once the clamp is secured, tighten the shaft to stabilize the position of the tablet holder.

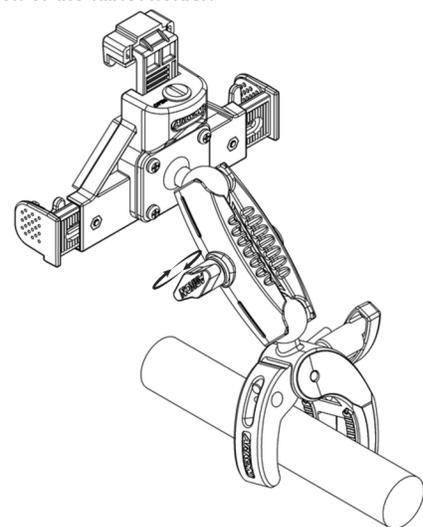

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING


Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation

Continued on page 2

5

Optional - Installing the foam padding if not utilizing a phone case


To properly set up the holder, find the packaging that contains the foam padding and place it on the sides of the holder.

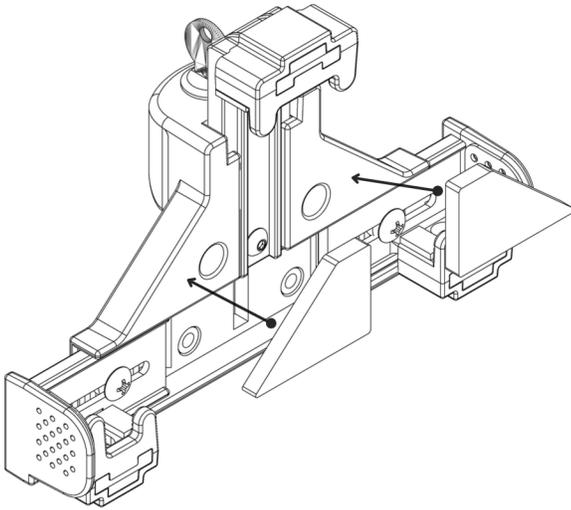

6

Adjusting the length of the holder

To adjust the holder, use a Phillips screwdriver. Loosen the screws in order to expand the width and depth of the holder.

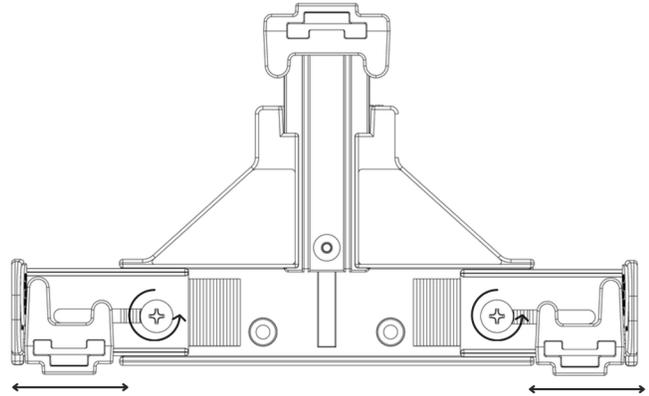

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

